


Product Specification Sheet

Part No.	Description	Last Updated
L6	ALM L6 Partition Support	05/07/07

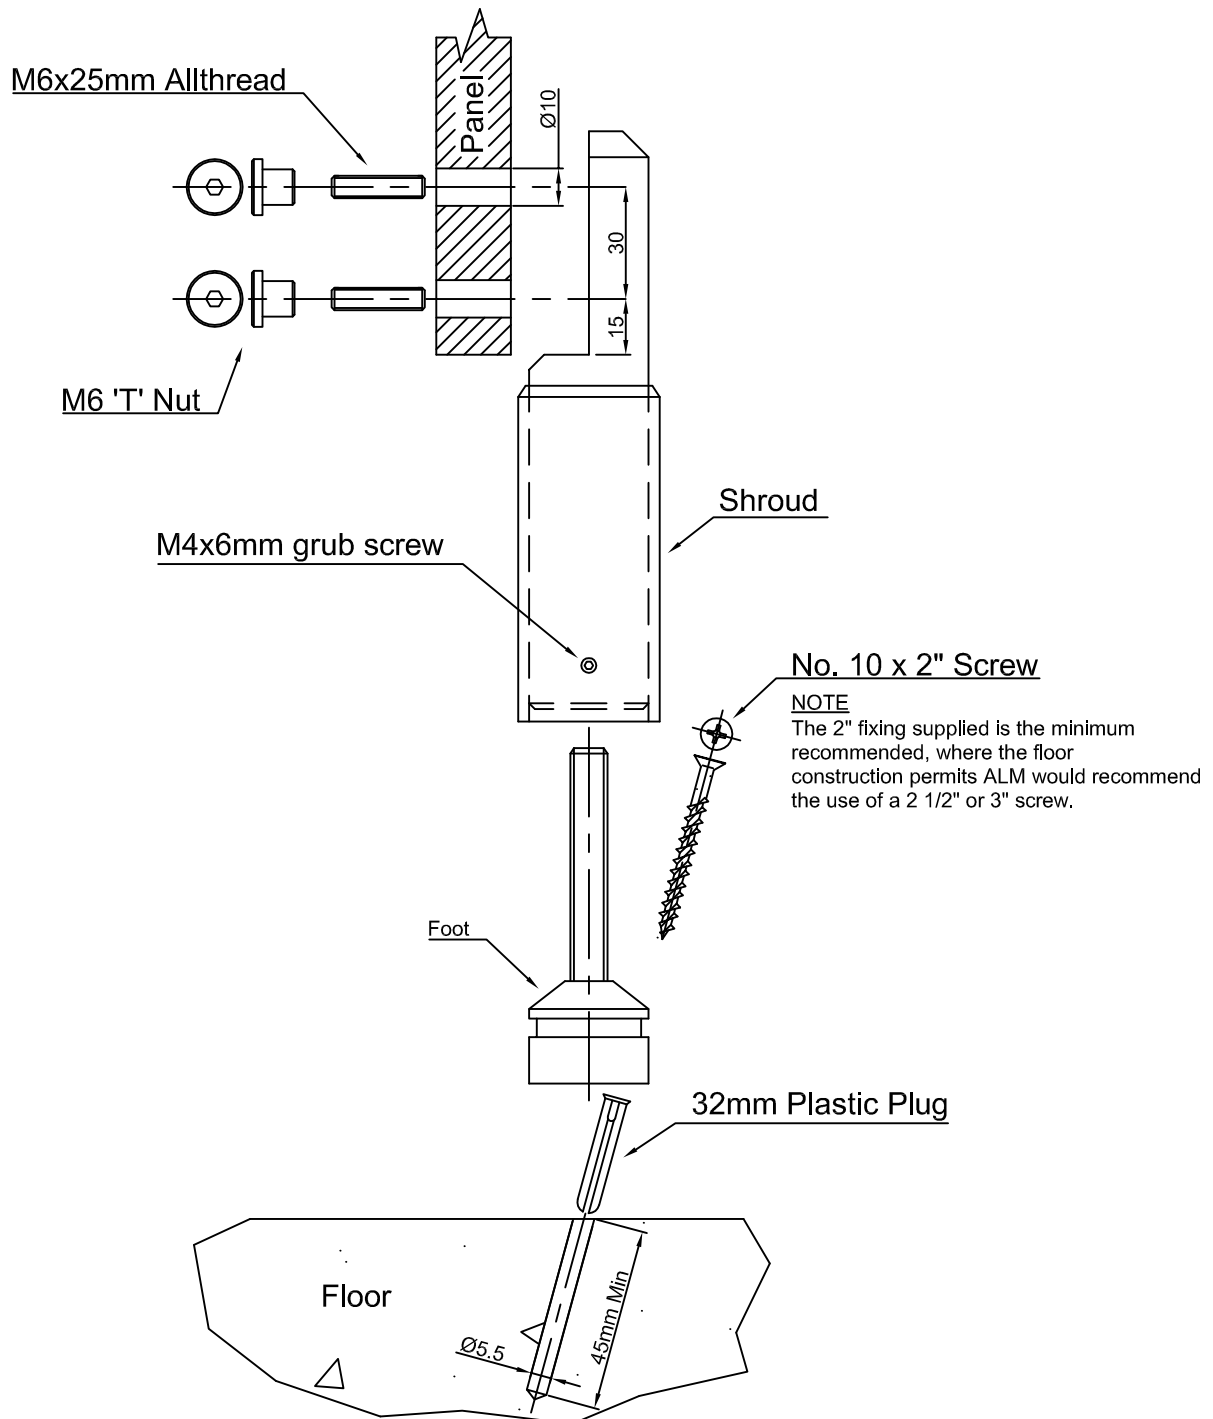

1. Mark off the vertical centreline of the leg onto the fascia and drill the two 10mm dia holes and fit the leg as shown in the drawing.
2. Loosen the small retaining screw on the base of the leg and raise up the shroud to access the adjusting mechanism of the leg. Screw the foot up into the leg as far it will allow.
3. The partition can now be offered up to the wall mounting brackets and using packing pieces set the required height (normally 150mm).

4. The foot in the leg can now be adjusted down to the floor level until it takes the weight off the packing pieces. It can now be secured to the floor by drilling through the angle hole in the foot with a 5.5mm masonry drill, the holes need to be at least 45mm deep.
5. Push the red plug into the floor hole and secure the leg using the screw provided.
6. Lower the shroud in the leg until it is resting on the floor and secure using the small screw on the side of the leg.